


P0.00
P0.01
P0.02
P0.03
GND
P0.04
P0.05
P0.06
P0.07
P0.08
P0.09
P0.10
P0.11
P0.12
P0.13/AIN0
P0.14/AIN1
P0.15/AIN2
P0.16/AIN3
P0.17/AIN4

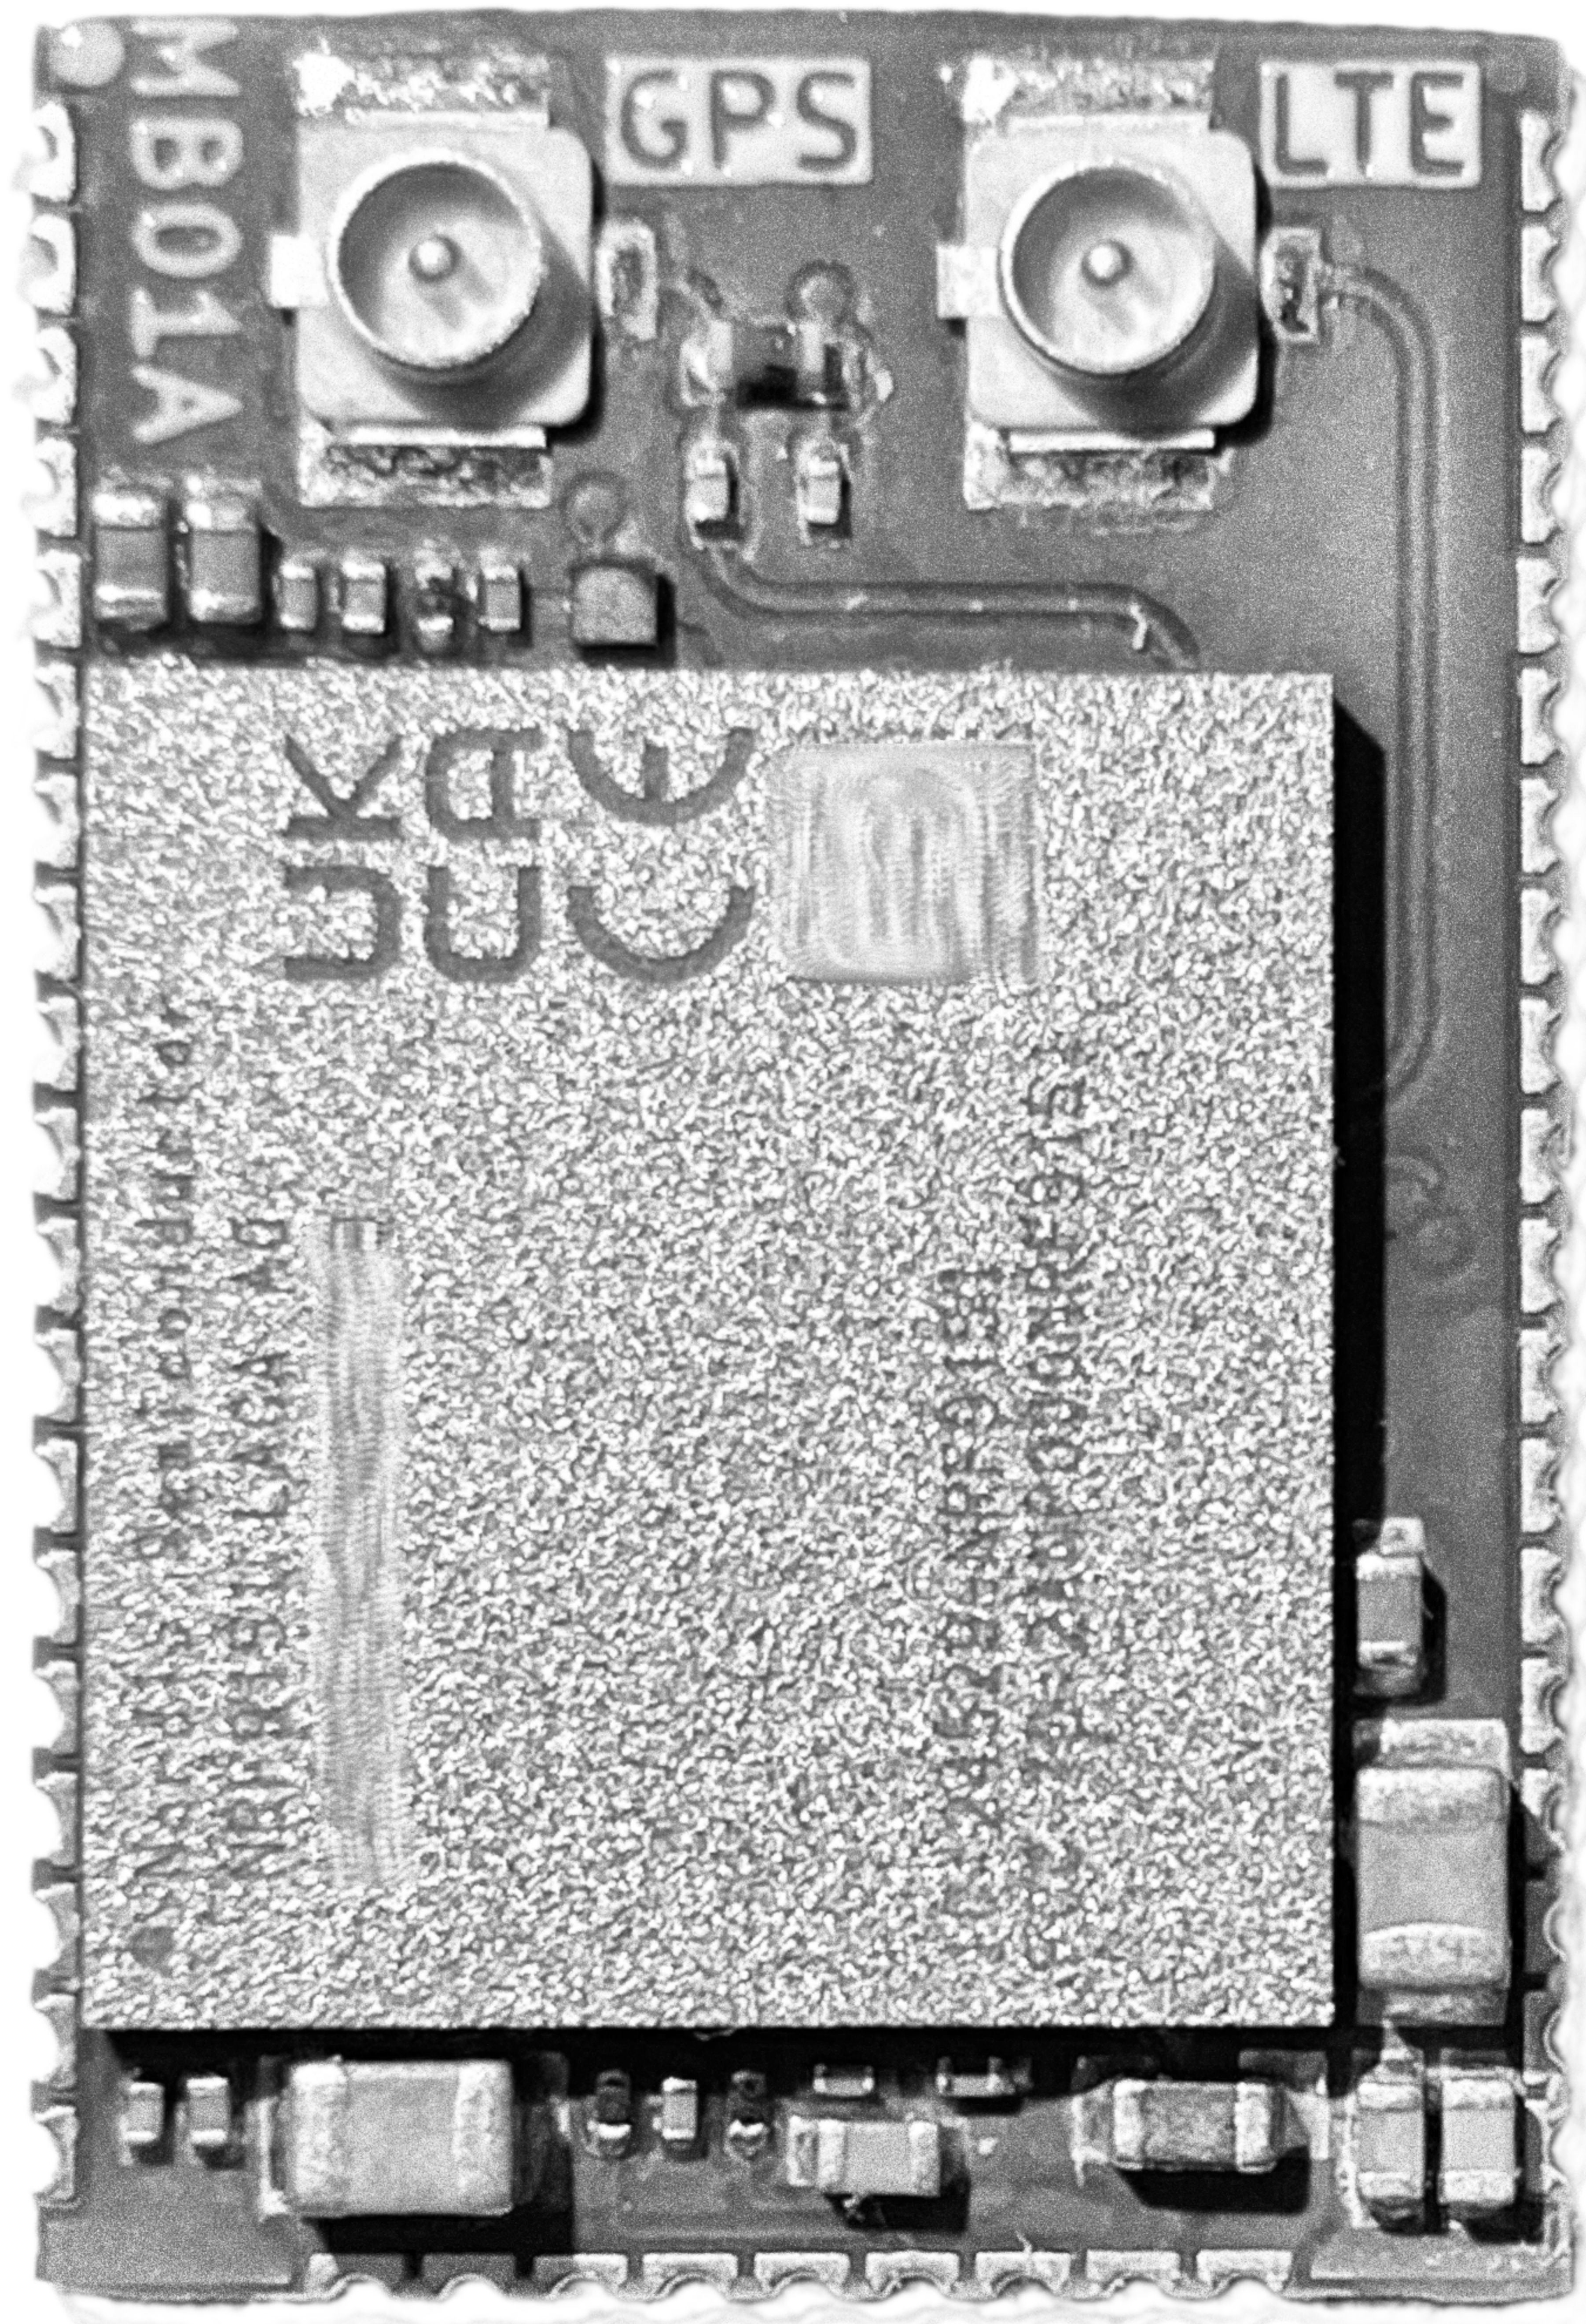

P0.31
P0.30
P0.29
P0.28
GND
P0.27
P0.26
P0.25
P0.24
P0.23
P0.22
P0.21
P0.20/AIN7
P0.19/AIN6
P0.18/AIN5
SIM_RST
SIM_IO
SIM_CLK
SIM_1V8

VDD_GPIO
GND
SWDCLK
SWDIO
VDD_GPS
~RESET
1PPS
GND
VDD